

# TRIPOD SCREEN (TS)

## OPERATION GUIDE

Congratulations to your purchase of projection screen! If you take a moment to read through the operation guide you will get the most out of your Kingpin screen.

### INSTALLATION

You can use the screen where ever you like as long as there is a levelled floor to place it., at a very skew mounting you may have problems to roll the screen up and down.

### USE

When the screen is unpacked for the first time it is in a folded position. To be able to use the screen properly you must straighten out the tripod and extend the telescopic arm so that the cassette can be placed in a vertical position. Adjust the height of the cassette with the handle that is placed on the back of the cassette. You can now pull the screen up with the handle that is placed in the middle of the pole. To prevent skew stress on the screen, always pull up the screen in the middle. On the three legged tripod there is telescopic stand where you adjust the height of how far up the screen should go. Set this in the position you would like, pull up the screen and attach it to the fork.

When the screen is in a preferable position you may adjust the image with the projector so that it will land on the screen's image area. When you want to roll the screen back into the cassette, you should roll it fast but careful. Never let the screen roll in by itself without control.

To make your screen obtain the same standard for a long time you should do the following: always pull the screen back into the cassette after use, never expose the screen for strong sunshine or high heat. When you unpack the screen you may notice some waves in the fabric, most of them will disappear in a few weeks in your home. How ever a roll-screen will almost never be completely free from waves.

### CLEANING

Use a wet cotton rag to clean the screen. Avoid cleaning agents and other strong chemicals.

### SERVICE AND SUPPORT

Look at our webpage [www.kingpinscreens.com](http://www.kingpinscreens.com) under contact for possible service. Keep the original packing of the screen for any future service.