



# SHORT THROW FRAME SCREEN (SFS)

OPERATION GUIDE/BRUKSANVISNING/GEBRAUCHSANWEISUNG/GEbruiksaanwijzing/KÄYTTÖOHJEET


## MOUNTING BATCH / MONTERINGSSATS / MONTAGEPAKET / MONTAGE MATERIAAL / ASENNUSSARJA

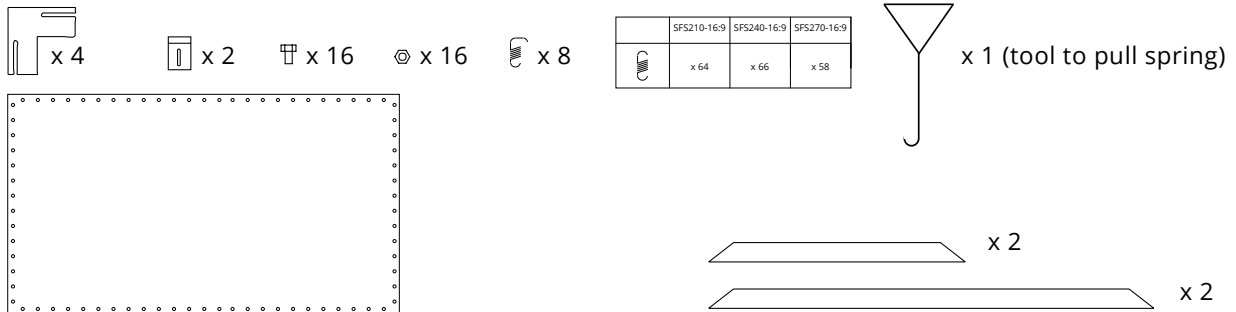


1:6

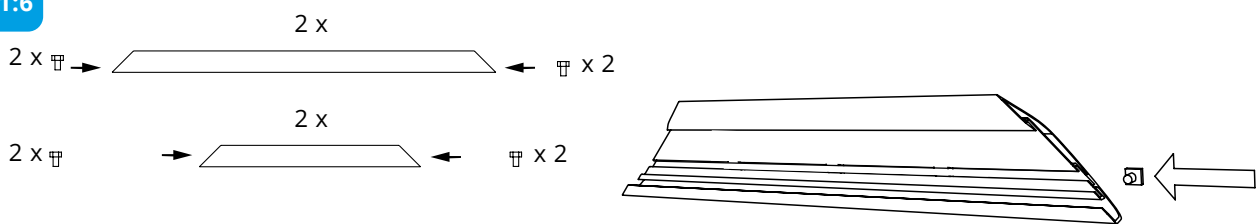


2:6

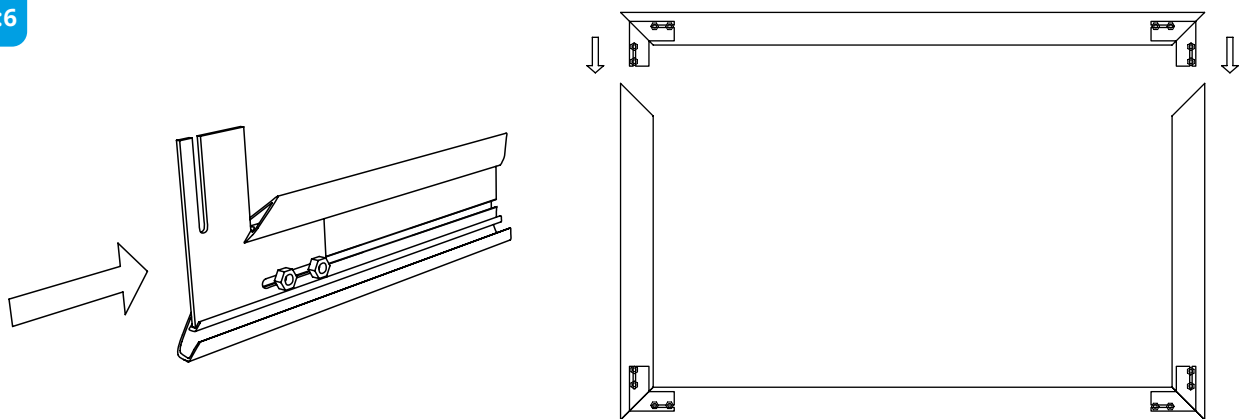

3:6

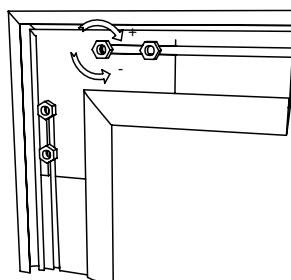


4:6

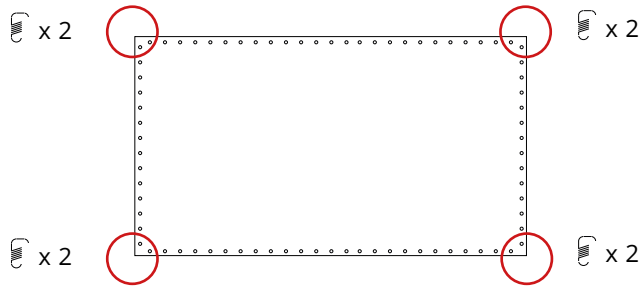



For all corner holes:  
1. Put the big side of the spring in the track.  
2. Pull with the tool to put the small side of the spring in the hole in the fabric.

5:6

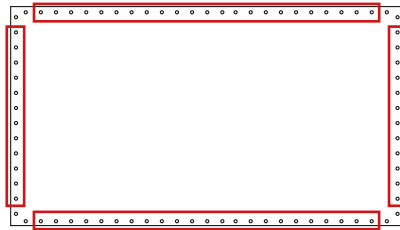

For all other holes:  
1. Put the one side of the spring in the track.  
2. Pull with the tool to put the other side of the spring in the hole in the fabric.

7:6

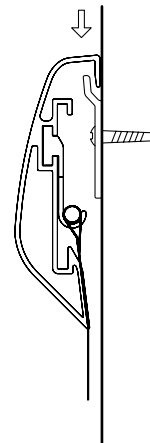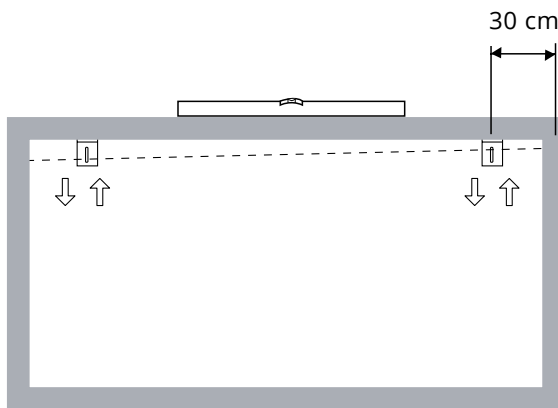

**FOR SERVICE/HUOLTO:**

All Countries ..... [www.kingpinscreens.com](http://www.kingpinscreens.com)

NORWAY ..... [www.avpartner.no](http://www.avpartner.no)